

kōnyks

Senso

Manuel d'utilisation User Guide



p. 2



p. 6



Flash QR Code to get instructions in
your language

Flash-QR-Code, um Anweisungen in
Ihrer Sprache zu erhalten

Codice QR Flash per ottenere istruzioni
nella tua lingua

Flash QR Code para obtener instruc-
ciones en su idioma

Flash QR-code om instructies in uw taal
te krijgen

1 Installez l'application



- Téléchargez l'application «Konyks» sur votre smartphone puis ouvrez-la
- Cliquez sur «Enregistrer» • Entrez vos identifiants

2 Installez le détecteur

- Ouvrez le boîtier, installez les 2 piles (LR03 non fournies) • Procédez au montage sur vos portes ou fenêtres selon le schéma ci-contre • Lancez l'application Konyks.
- Cliquez « + » sur la page d'accueil puis choisissez « Détecteurs d'ouverture » • Confirmez que le voyant clignote en rouge rapidement • Entrez le mot de passe Wi-Fi de votre Routeur ou Box Internet

Si le voyant ne clignote pas, ouvrez le cache arrière, appuyez sur le bouton Reset. Maintenez au moins 5 sec jusqu'à ce que le voyant clignote rapidement en rouge. au moment de l'installation votre Smartphone doit être connectés à un réseau Wifi 2.4 Ghz. Si besoin désactivez les réseaux 5Ghz

- Assurez-vous que le nom du détecteur dans l'application Konyks corresponde bien à l'usage souhaité, par exemple «porte d'entrée»

3 Connectez à Google Home ou Amazon Alexa


- **Google Home** : Ouvrez l'application Google Home • Cliquez sur l'icône « + » , puis Configurer un appareil / Fonctionne avec Google et choisissez

kōnyks

- **Amazon (Echo, Alexa)** : Ouvrez l'application Amazon Alexa • Choisissez Skills puis choisissez kōnyks



Entrez vos identifiants utilisés pour vous connecter à l'appli Konyks

Description

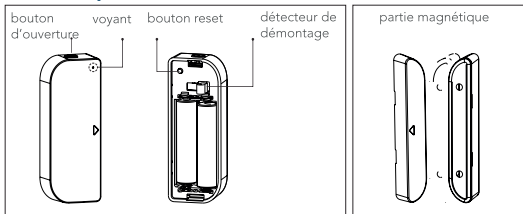

Montage

Les deux parties du détecteur doivent être placées face-à-face à env. 10mm de distance. Ne pas installer sur du métal.

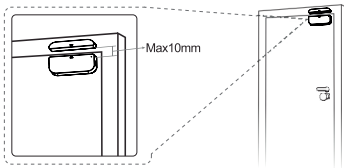

Assurez-vous que les triangles en face avant du détecteur sont positionnés face-à-face. Le détecteur peut-être collé ou vissé avec les accessoires fournis.

CARACTÉRISTIQUES

Compatible avec les réseaux Wi-Fi 2.4 Ghz • Permet de recevoir des notifications sur son Smartphone en Wi-Fi ou en 4G • Notifications en cas d'ouverture, en cas de démontage du boîtier et lorsque les piles sont faibles • Alimentation 3V (2 piles de type AAA/LR03 non fournies) • 4 vis de montage et 2 adhésifs double face inclus

PRÉCAUTIONS D'UTILISATION

Prenez soin de respecter la polarité des piles lors de leur insertion • Ne pas démonter, modifier ou tenter de réparer le produit. • Ne pas utiliser le produit s'il apparaît endommagé • Ne pas renverser de liquide, ce produit n'est pas prévu pour une utilisation en extérieur • Ne pas exposer à de hautes températures • Température de fonctionnement : -10° à +40° • Ne pas utiliser de liquide ni de solvant pour nettoyer l'appareil • Ne pas laisser à la portée des enfants.

Usage intérieur uniquement



GARANTIE

Ce produit est garanti contre tout vice de fabrication pendant 24 mois. La garantie s'applique à condition que l'appareil soit utilisé conformément à l'usage pour lequel il a été vendu et notamment dans le cadre d'une utilisation domestique et non pas professionnelle.

RECYCLAGE



Des systèmes de tri, de triage et de collecte sont mis à votre disposition par les collectivités locales (déchetteries) et les distributeurs. Vous avez l'obligation d'utiliser les systèmes de collecte sélective mis à votre disposition.

DÉCLARATION UE DE CONFORMITÉ SIMPLIFIÉE

Le soussigné Apynov déclare que l'équipement radioélectrique Konyks Senso de type HKWL-DWS02W est conforme à la directive 2014/53 UE, 2011/65UE & 2015/863UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://konyks.com/ce-senso/>

Les caractéristiques, précautions d'emploi et informations légales doivent être consultées en suivant le lien du QR Code en Page 1

SIMPLIFIED EU DECLARATION OF CONFORMITY

The undersigned Apynov declares that the Konyks Senso type HKWL-DWS02W radio equipment is in compliance with directive 2014 / 53UE, 2011/65UE & 2015/863UE. The full text of the EU declaration of conformity is available at the following internet address: <https://konyks.com/ce-senso/>

The characteristics, precautions for use and legal information must be consulted by following the link of the QR Code on Page 1

Modèle : Konyks Senso (HKWL-DWS02W) • Connectivité sans fil / Wireless: Wi-Fi: 2400 MHz ~ 2483.5 MHz (Max 17 dBm)

Apynov, 5 esplanade Compans-Caffarelli, bât A, CS57130 – 31071 Toulouse cedex 7 • Manufactured by: HANK SMART TECH CO., LTD, 101, Unit 1607-1611, Block11, Cloud Park Phase 2, Bantian Street, Longgang District, Shenzhen, China, 518129

Fabriqu  en Chine / Made in China

1 Install Konyks APP



- Download the «Konyks» app on your smartphone and open it
- Click «Register»
- Enter your login details

2 Install the sensor

- Open the case, install the 2 batteries (LR03 not included)
- Proceed to the assembly on your door or window according to the diagram next page
- Launch the Konyks App.
- Click «+» on the home page and choose «Opening Detectors»
- Confirm that the LED is blinking red quickly
- Enter the Wi-Fi password of your Router or Internet Box



If light does not flash, open the back cover, press the Reset button. Hold for at least 5 seconds until the indicator flashes rapidly in red. at the time of installation your Smartphone must be connected to a 2.4 Ghz Wifi network. If needed, disable 5Ghz networks during installation.

- Make sure that the name of the detector in the Konyks application matches the intended use, for example «front door»

3 Connect with Google Home or Amazon Alexa



- **Google Home** : Open the Google Home app • Click the «+» icon, then Set up device / Works with Google and choose **kōnyks**
- **Amazon (Echo, Alexa)** : Open the Alexa app • Choose Skills and select Enter your credentials used to sign in to the Konyks app **kōnyks**

Description

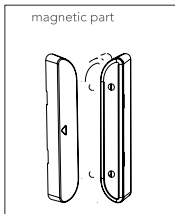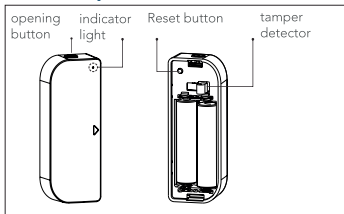

Mounting

Both parts of the sensor must be placed face-to-face approximately 10mm apart. Do not install on metal.

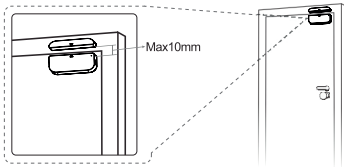

Make sure that the triangles on the front of the sensor are face-to-face. The sensor can be stuck or screwed with the supplied accessories.

CHARACTERISTICS

Compatible with Wi-Fi 2.4 Ghz networks 802.11 b / g / n • Receive notifications on your smartphone in Wi-Fi or 4G • Notifications in case of opening, in case of disassembly of the housing and when the batteries are low • Operating temperature: -10 ° to + 40 ° • 3V power supply (2 AAA batteries not included) • 4 mounting screws and 2 double-sided adhesives included

SAFETY INFORMATIONS

Take care to respect the polarity of the batteries when inserting them • Do not disassemble, modify or attempt to repair the product. • Do not use the product if it appears damaged • Do not spill liquid, this product is not intended for outdoor use • Do not expose to high temperatures • Do not use liquid or solvent to clean the product. • Do not leave within the reach of children.

Indoor use only



WARRANTY

This product is guaranteed against any manufacturing defect for 24 months. The terms of application may vary depending on your reseller. The warranty applies provided that the appliance is used in accordance with the use for which it was sold and in particular in the context of domestic use and not professional use.

RECYCLING



Return and collection systems are made available to you by local authorities (waste reception centers) and distributors. You are obliged to use the selective collection systems made available to you.